

Hisense

life reimagined

USER'S OPERATION MANUAL

Before operating this unit, please read this manual thoroughly, and retain for future reference


WD5S1045BW
WD5S1045B*
WD5S1245BW
WD5S1245B*

English


CONTENTS

4 SAFETY PRECAUTIONS 12 WASHER DRYER DESCRIPTION 13 Technical specifications 14 Control unit	INTRODUCTION
16 INSTALLATION AND CONNECTION 17 Removing the transport screws/rods 18 Moving and transport after installation 19 Selecting the room 19 Adjusting the washer dryer feet 20 Washer dryer installation clearances 21 Connecting to water supply 21 Aqua stop 22 Connecting and securing the water discharge hose 24 Connecting the appliance to the power mains 25 BEFORE USING THE APPLIANCE FOR THE FIRST TIME	PREPARING THE WASHER DRYER BEFORE FIRST USE
26 WASHING PROCESS, STEP BY STEP (1-7) 26 Step 1: Heed the labels on the laundry 27 Step 2: Preparing the washing process 32 Step 3: Choosing the washing programme 36 Step 4: Selecting additional settings and functions 42 Step 5: Starting the washing programme 43 Step 6: Change of washing programme or manual (physical) cancellation 44 Step 7: End of the washing programme 45 INTERRUPTIONS AND CHANGING THE PROGRAMME 47 MAINTENANCE & CLEANING 47 Cleaning the detergent compartment 48 Cleaning the water supply hose, detergent dispenser housing, and rubber door gasket 49 Cleaning the pump filter 50 Cleaning the washer dryer exterior	STEPS OF THE WASHING PROCESS
51 TROUBLESHOOTING 51 What to do ...? 52 Troubleshooting and error table 53 Servicing 54 RECOMMENDATIONS FOR WASHING AND ECONOMIC USE YOUR WASHER DRYER 56 Stain removal tips 58 DISPOSAL 58 TYPICAL CONSUMPTION TABLE 60 Wi-Fi connection	WASHER DRYER CLEANING AND MAINTENANCE
	TROUBLE-SHOOTING
	MISCELLANEOUS

CONTROL UNIT

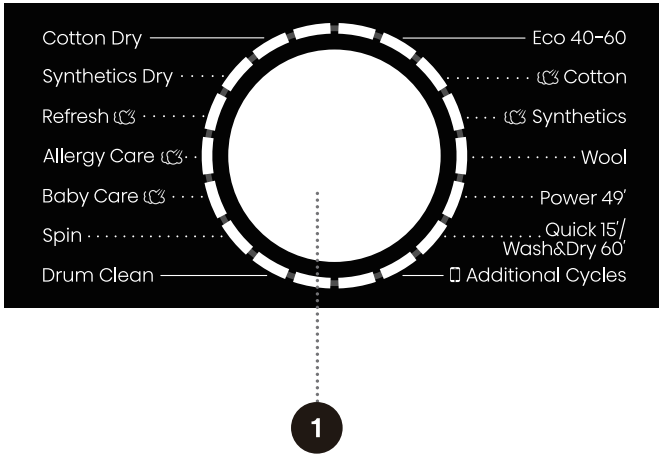

1 PROGRAMME SELECTOR KNOB

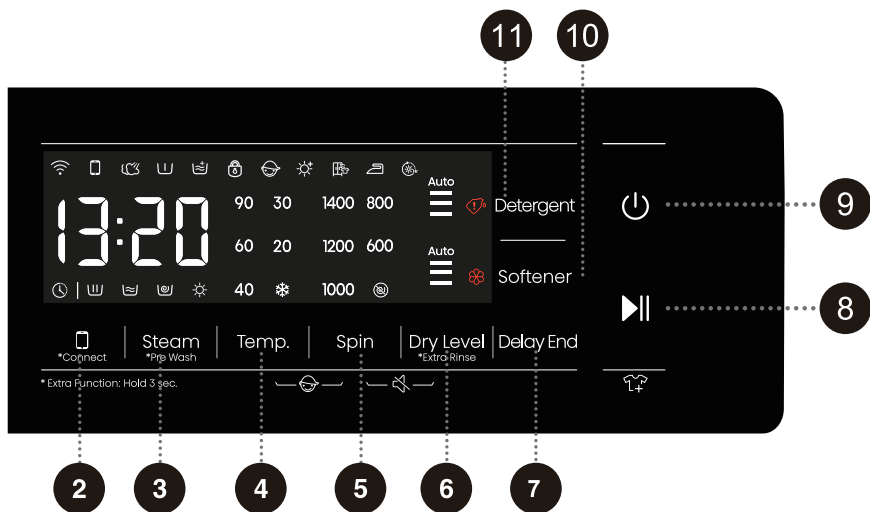

2 *CONNECT

Washer dryer network control key. See the Wi-Fi guide on the last page for how to configure the network.

5 SPIN

Press to change the spinning speed for the current cycle. NO Spin : The drum does not spin after the final drain cycle.

8 START/PAUSE

Start/Pause the whole machine program running.

10 SOFTENER

4+5 CHILD LOCK

Press these two keys at the same time to enable or disable the child lock function.

3 STEAM *PRE WASH

Add or subtract Steam and Pre wash functions by long press and short press.

6 DRY LEVEL

Press the "Dry Level" button to select the dry time and additional functions of dry.

EXTRA RINSE

Press to change the rinse count for current cycle.

9 POWER

Press to turn on/off the washing machine.

11 DETERGENT

5+6 MUTE (SWITCHING OFF THE ACOUSTIC SIGNALS)

4 TEMP.

Press to change the water temperature for the selected cycle.



























7 DELAY END

Delay End lets you set the end time of the current cycle. Based on your settings, the start time of the cycle will be determined by the machine's internal logic. For example, this setting is useful for programming your machine to finish a wash at the time you normally return home from work. Press to choose a preset unit of hours.

For extra function: Press and hold for 3 seconds.


WASHING PROCESS, STEP BY STEP (1–7)

STEP 1: HEED THE LABELS ON THE LAUNDRY

Normal wash; Sensitive laundry	Max. washing temp. 95°C  	Max. washing temp. 60°C  	Max. washing temp. 40°C  	Max. washing temp. 30°C  	Hand wash only 	Do not wash 
Bleaching	Bleaching in cool water 			Bleaching not allowed 		
Dry cleaning	Dry cleaning with all agents 	Petroleum solvent R11, R113 	Dry cleaning in kerosene, pure alcohol, and R113 	Dry cleaning not allowed 		
Ironing	Hot ironing, max. 200°C 	Hot ironing, max. 150°C 	Hot ironing, max. 110°C 	Ironing not allowed 		
Drying	Dry flat (place on a flat surface) 	Drip dry  Line dry 	High temperature  Low temperature 	Do not tumble dry 		

STEP 2: PREPARING THE WASHING PROCESS


1. Sort the laundry by type of fabric, colour, soiling, appliance load, and allowed washing temperature (see PROGRAMME TABLE).
2. Close the buttons and zippers, tie any ribbons, and turn the pockets inside out; remove any metal clips that could damage the laundry and washer dryer interior, or clog the drain.
3. Place very sensitive clothes and small items in a special-purpose laundry washing bag.

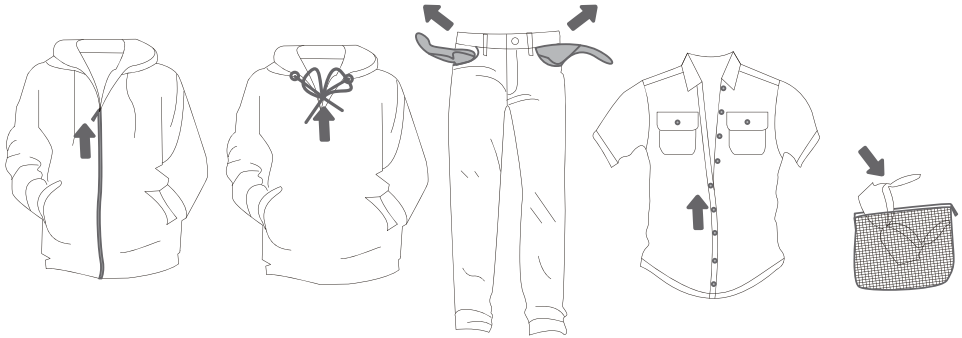

INSTRUCTIONS FOR AUTOMATIC SOAP DISPENSER

This product has an auto dosing feature to automatically add the right amount of detergent/softener to a wash. You can adjust the amount automatically dispensed by selecting little medium or large depending upon the strength of the washing needed. When the "Auto" option is selected, the washer dryer will intelligently judge the amount of detergent and softener according to the weight of the laundry. If you don't want to use the "Auto" option, please deselect it and add detergent and softener manually.

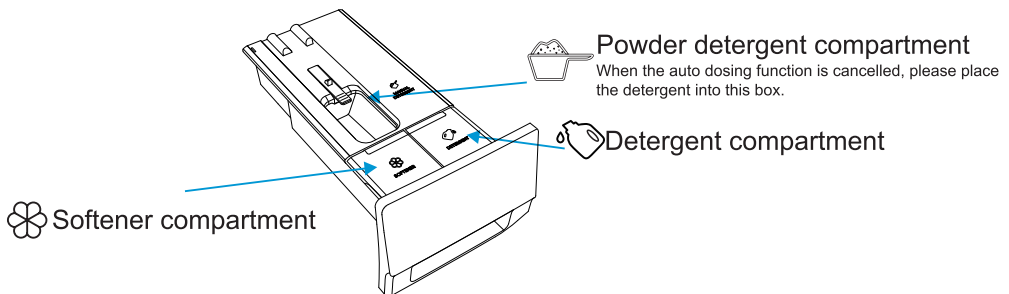

► ADDING OF DETERGENT/SOFTENER



► PREWASH

- When the auto-dosing function is turned on and the prewash function is selected, the amount of detergent in the prewash phase is half of that of the main wash phase.
- The amount of detergent in the pre-wash phase does not affect the detergent in the main wash phase.

► AUTO DOSING OPERATION STEPS


- When the washer dryer is used for the first time, the auto dosing function of both the detergent and softener is switched on by default. The washer dryer will remember the last chosen option when being started.
- To activate the function press the “Detergent” button. Press the detergent switch repeatedly to cycle through to the off position (not lit).
- When the icons  /  are light up, this indicates that the amount of detergent/softener is insufficient. Please top up as necessary. The maximum amount needed to fill the reservoirs is 1L of detergent or 0.5L of softener.

► PRECAUTIONS

1. It is recommended that you use low-foaming detergent
2. Please do not overfill the detergent/softener reservoirs as they may overflow
3. After filling, please ensure that the detergent drawer is fully closed before starting the washing program.
4. Please remove or secure the detergent drawer before installing, moving, handling, and adjusting the washer dryer. This is to avoid the inconvenience caused by an overflow of the detergent and softener.


► SOFTENER

Auto dosing

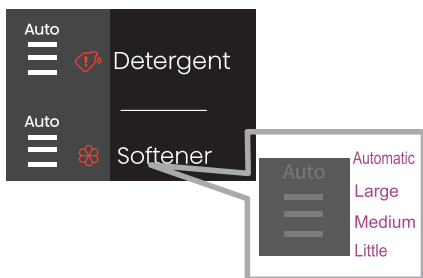


If the Auto icon is ON and all 3 lines are ON, it means that you have selected the automatic dosing function. The fabric softener is dosed automatically, depending on how much laundry is in the drum.

Manual dosing

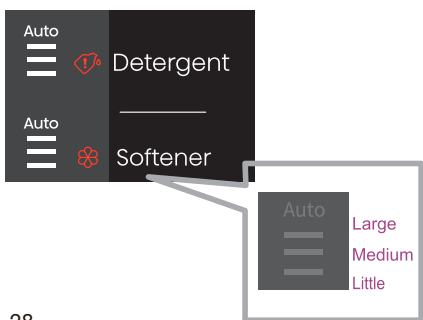

It is possible to manually select the desired amount of softener dosage. We can set the desired dosage value of the softener ourselves. There are three levels, little, medium and large. Manual dosing is selected when the Auto icon is not ON and lines can be selected (little, middle, large).


Softener OFF

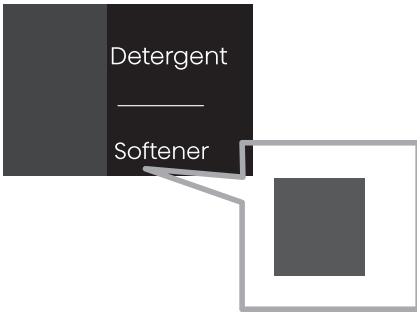

The softener is turned off and will not be dosed at the end of the program. This is visible on the display as in the picture below. No LED indications.


► DETERGENT

Auto dosing

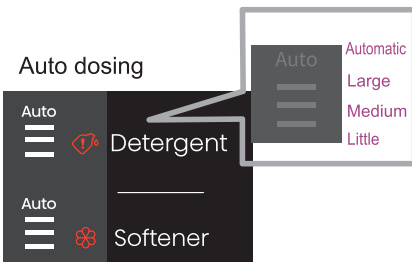


If the Auto icon is ON and all 3 lines are ON, it means that you have selected the automatic dosing function. The fabric detergent is dosed automatically, depending on how much laundry is in the drum.

Manual dosing

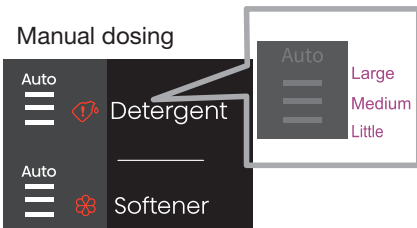


It is possible to manually select the desired amount of detergent dosage. We can set the desired dosage value of the detergent ourselves. There are three levels, little, medium and large. Manual dosing is selected when the Auto icon is not ON and lines can be selected (little, middle, large).

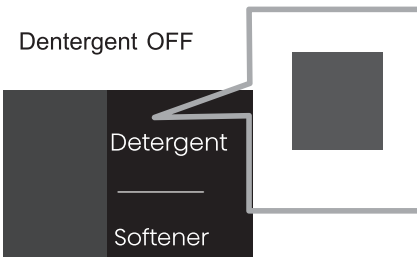

Detergent OFF





The detergent is turned off and will not be dosed at the end of the program. This is visible on the display as in the picture below. No LED indications.

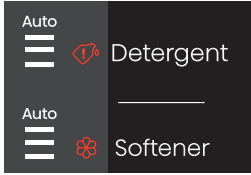► ADDING DETERGENT AND SOFTENER



If the display /  icons flash, it indicates that the amount of detergent/softener is insufficient. Please top up to a maximum of 1 L of detergent or 0.5L of softener.

► RE-ADDING OF DETERGENT/SOFTENER

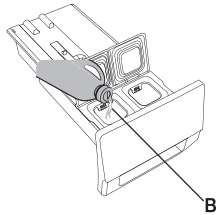
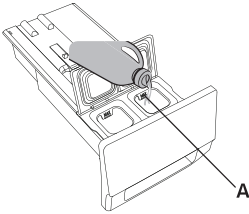


1. Slide to open the detergent drawer.
2. Add an appropriate amount of detergent to the automatic detergent compartment (A).
3. If necessary, add an appropriate amount of softener to the automatic softener compartment (B).
4. Close the auto dosing drawer.

SWITCHING ON THE WASHER DRYER


Use the power cord to connect the washer dryer to power mains, and connect the washer dryer to water supply.

Turn the appliance on by press the button "POWER" (figures 1 and 2).

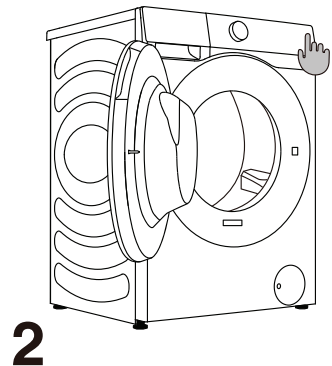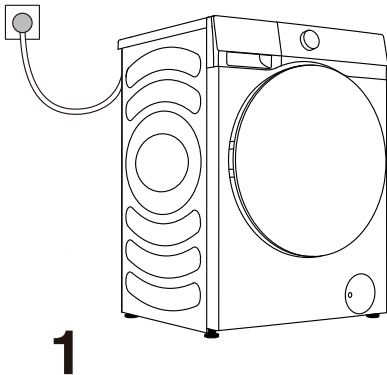


LOADING THE WASHER DRYER


Open the washer dryer door by pulling the handle towards you (figure 1).
Insert the laundry into the drum (after making sure the drum is empty) (figure 2).
Close the washer dryer door (figure 3). The door is closed when you here a click.

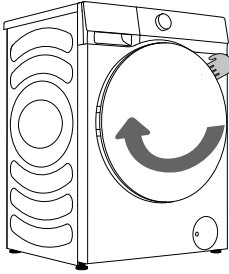

1

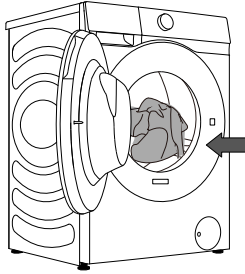

2

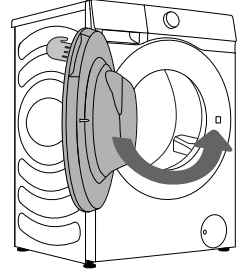

3



⚠ Never try to forcefully open the door. Moreover, do not open the door during washer dryer operation.

Do not overload the drum! See PROGRAMME TABLE and observe your nominal load as indicated on the rating plate.

If the washer dryer drum is too full, the laundry will not be washed as thoroughly.

STEP 3: CHOOSING THE WASHING PROGRAMME

Choose the **programme** by rotating the programme selector knob (1) to the left or to the right (depending on the type of laundry and how heavily soiled it is). See PROGRAMME TABLE.

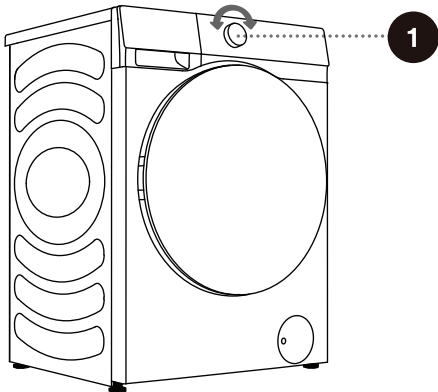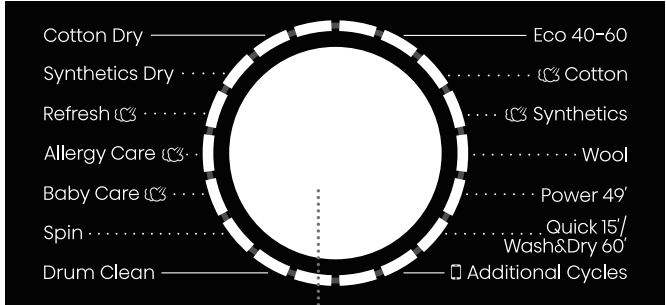

⚠ During operation, the programme selector knob (1) will not rotate automatically.

PROGRAMME TABLE

Programme	Functions	Max. load kg		Max spinning rate rpm	Programme description
Eco40-60	W	10.5	12	1400	Normally soiled cotton laundry.
	WD	6	8	1400	
Cotton (- -, 20°C, 30°C, 40°C, 60°C, 90°C)	W	10.5	12	1400	Heavily and moderately soiled cotton, or linen. For very heavily soiled items select the "Prewash" function.
	WD	6	8	1400	
Synthetics (- -, 20°C, 30°C, 40°C, 60°C)	W	5	6	1400	The program is suitable for moderately soiled synthetic and cotton fabrics.
	WD	5	6	1400	
Wool (- -, 20°C, 30°C, 40°C)	W	2		600	The program is suitable for machinewashable wool (see label on the garment).
Power 49' (- -, 20°C, 30°C, 40°C)	W	4		800	It is a short-time powerful washing procedure, which is used to wash a small amount of clothes with a high degree of dirt
Quick 15'/ Wash&Dry 60' (- -, 20°C, 30°C, 40°C)	W	1		800	Cotton, mixed fabrics. Items worn for a short time or newly bought. / The wash and dry process within 60 minutes is suitable for wash and dry the clothing with light dirty at once, such as the T-shirts, shirts and skirts that should be changed daily. It is recommended that no more than 3 pieces of skirts should be washed at a time. Select the function key "Dry Level" to complete the conversion of the two programs.
	WD	1		800	
Drum Clean (self-cleaning programme) (90°C)	/	0		800	The program is used for cleaning the drum and removing any residues of detergent and bacteria that can accumulate and develop especially when you use programmes with low washing temperatures. The drum has to be empty. You can add some distilled (spirit) vinegar (approx. 2 dl) or sodium bicarbonate (1 tablespoon, or 15 g). Run this programme at least once a month.
Spin (spinning rate)	S	10.5	12	1400	In this program, you can select the duration and spinning rate manually.
	SD	6	8	1400	
Baby Care (40°C, 60°C, 90°C)	W	2		1400	It is suitable for baby clothes and underwear, etc., which sterilizes and disinfects through high temperature steam
	WD	2		1400	
Allergy Care (40°C, 60°C, 90°C)	W	2		1400	It is suitable for high temperature resistant and less fading fabrics, which removes allergens such as pollens, mites and parasites through high temperature steam.
	WD	2		1400	

W→Wash

D→Dry

WD→Wash and Dry

S→Spin

SD→Spin and Dry

Programme	Functions	Max. load kg		Max spinning rate rpm	Programme description
Refresh	W	2		/	It is suitable for removing the peculiar smell (such as, the smell of smoke/hot pot/barbecue, etc.) on the clothes.
Synthetics Dry	D	5	6	/	The wet chemical fiber clothes can be dried after being spun.
Cotton Dry	D	6	8	/	The wet cotton & linen clothes can be dried after being spun.
□ Additional Cycles					
Rinse+Spin —	W	10.5	12	1400	This program is defaulted to two rinses and spin.
	WD	6	8	1400	
Shirts (- -, 20°C, 30°C, 40°C, 60°C)	W	2		1400	This program is suitable for cotton clothes with light stains,energy saving.
	WD	2		1400	
Jeans (- -, 20°C, 30°C, 40°C, 60°C)	W	5	6	1400	The program is suitable for jeans.
	WD	5	6	1400	
Silk/Delicates (- -, 20°C, 30°C, 40°C)	W	2		600	Soft delicate fabrics and machine washable silk. (Refer to the washing label attached to the clothing).
Bedding (- -, 20°C, 30°C, 40°C, 60°C)	W	3		1400	Program adapted to wash large items - e.g. Curtains, sheets, duvet covers.
	WD	3		1400	
Mix (- -, 20°C, 30°C, 40°C)	W	5	6	1400	Mixed loads of moderately soiled cotton and synthetic fabrics.
	WD	5	6	1400	

NOTE:

- 1)Water Temperature: Select the appropriate water temperature for chosen wash programme. Always follow garment manufacturer's care label or instructions when washing to avoid damage to clothes.
- 2)Actual water temperature may differ from the declared cycle temperature.
- 3)The test results depend on water pressure, water hardness, water inlet temperature, room temperature, type and amount of load, degree of soiling utilized detergent, fluctuations in the main electricity supply and chosen additional options.
- 4)Neutral (non sudsing) detergent is recommended.
- 5)Dry powder detergent should be mixed with warm water (in all cases not just energy program).

Note for Additional Cycles:

Users need to rotate knob to the corresponding position, and requires APP connection on the smartphone to use additional cycles. If not connected to the network, the default program is [Rinse+Spin]. User can use mobile phone APP to select [Rinse+Spin,Shirts,Jeans, Silk/Delicates,Bedding, Mix] programs.


STEP 4: SELECTING ADDITIONAL SETTINGS AND FUNCTIONS

Most programmes feature basic settings, but these settings can be changed.

Adjust the settings by pressing the relevant function button (before pressing the (8) START/PAUSE button).

☺ Activate/deactivate the functions by pressing the desired function (before pressing the (8) START/PAUSE button).

☺ Certain settings cannot be selected with some programmes. Such settings will not be lit, and when the corresponding button is pressed, an acoustic signal will be emitted and the button will flash (see FUNCTION TABLE).

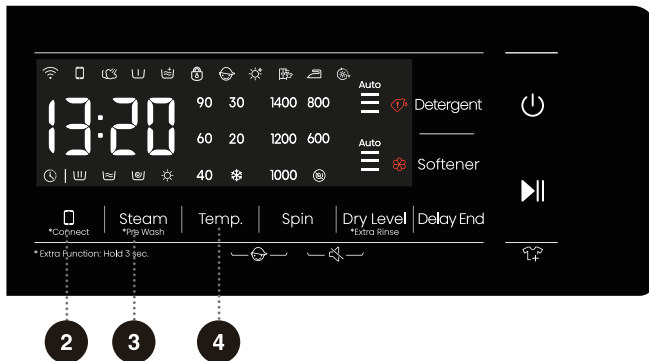

2

Connect

It is divided into two modes: "press and hold" and "press briefly".

Press briefly: start the remote control permission of the washing machine;

Press and hold: Connect the Wi-Fi of the washing machine, the control panel symbol "☺" flashes, and then conduct the networking operation. See the networking description for the specific networking method.

3

Steam, *Pre Wash

It is divided into two modes: "press and hold" and "press briefly".

Press briefly: Add "Steam" function, press twice to cancel the function, and cycle in sequence.

Press and hold: Increase the "Pre wash" function, press twice to cancel the function, and cycle in sequence.

1. Select this function to add a Pre Wash program before the Main Wash stage.
2. After the program is started, the indicator remains on until the end of Pre Wash program. After the end of Pre Wash, the indicator will off.

4


Temp. (WASHING TEMPERATURE)

Changing the temperature for the selected program.

Each program has a preset temperature that can be changed by pressing the position (4) **TEMP.** (WASHING TEMPERATURE).

(-- indicates cold wash)

The temperature is displayed on the display unit above the button.

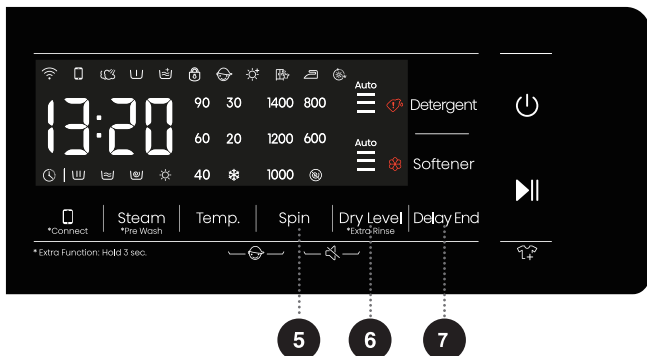

5 Spin (SPINNING RATE/DRAIN)

Use this to adjust the spinning rate. With preset or selected spinning rate, the selected spinning rate will be lit on the display unit. If you select draining without spinning, the 0 will appear on the display unit.

6 Dry Level *Extra Rinse

Press the "Dry Level" button to select the dry time and additional functions of dry.

EXTRA RINSE

Press to change the rinse count for current cycle.


7 Delay End

1.Press this key to set the Delay End time. This key is only valid in standby mode.

2.After the Delay End function is selected, each time the Delay End key is pressed, the time increases by 1h. If the programme time before the Delay End does not meet the integer multiple of 1h, then the first Delay End will make up the integer multiple of 1h. And after that, each time the Delay End key is pressed, the time increases by 1h. After the Delay End time is set up to 24h, the Delay End key can be pressed again to cancel this setting. If you turn the knob to select another programme or press other keys (including invalid keys, the principle is that any key that affects the washing process will cancel the Delay End program; however, Child Lock, Quiet, and remote control permission will not cancel the Delay End program) after the Delay End function is set and before the programme starts running, the current Delay End programme will be cancelled.

3.The Delay End time is the end time, that is, it includes the washing time, so the Delay End time must be greater than the washing time. For example, if the total time of the currently selected programme is 2:28, the selection range of Delay End time is 3-24 hours. That means, the display changes from 2:28 to 3:00, 4:00, ..., 9:00, h:10, ..., h:21 to h:24 in order. After the Delay End programme starts, the time display will change from h:24, h:23, ..., h:10, 9:59, 9:58, ..., until after the washing programme starts to run, at which time the display shows 2:28. This judgment condition also applies to the automatic weighing time function. When the display only shows the hour, the display shows the remaining time of the Delay End programme with the rounding method. (e.g. For 21:59, it still shows 21 hours.)

4.When the Delay End function is being selected (set), the Clock icon "🕒" is always on; When the Delay End programme is running, the Clock icon "🕒" flashes.

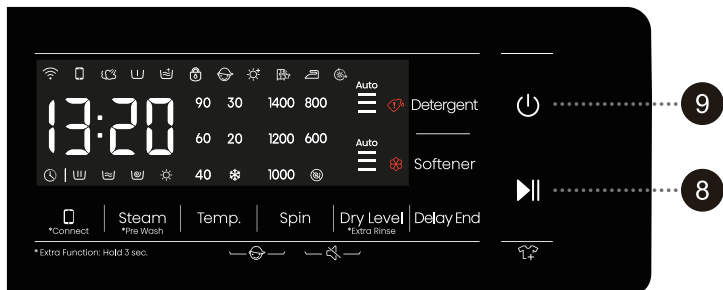


8 Start/Pause ▶||

- 1) Control the washer dryer from the standby state to the program running state, or from the program running state to the program pausing state.
- 2) Press the key in the standby mode to switch to door locking mode. If the door is unlocked, the washer dryer cannot start the program. At the same time, the door locking error alarm will occur.
- 3) After setting the Preset function, press this key in the standby state. If the door is normally locked, the washer dryer will switch to the Preset running state. If it is not locked, the washer dryer will switch to the abnormal state and the door locking error alarm will occur.
- 4) If the program is switched from the running state to the pausing state, the program will remain in the stopped position and wait for the user to press this key again to switch to the running state of the program. When the program switched from the Spin state to the program pausing state and then enters the program running state again, the program will start from the initial position of the Spin program.
- 5) Control the washer dryer to switch from abnormal state to program running state. This abnormal state applies only to alarm exceptions that can be canceled.
- 6) When the washer dryer is paused, the door will be unlocked automatically if the following conditions are met: 1. The water level is lower than the water level for opening the door; 2. The sensor temperature in the drum is lower than 50°C; 3. The motor speed is 0. If the unlocking conditions above are not met, there will be no action.
- 7) After starting the washer dryer, the set parameters can not be adjusted.

9 Power ⏻

- 1) Control the washer dryer to switch between "shutdown state" and "standby state". In the shutdown state, all display and output are turned off. The shutdown response time is 2s when the power key is pressed continuously.
- 2) Press the power key in the shutdown state, and the buzzer will sound to enter the standby state. The display's indications light up in turn as soon as the power is turned on.
- 3) Press the power key to start the machine and judge the door lock state:
- 4) After the washer dryer is in standby state or the END is displayed, the door will be unlocked, and press the power key to shut down. If there is no shutdown operation within 2 minutes, the washer dryer will automatically power off.
- 5) In the pausing state, the display time and colon on the LED flash at the same time.

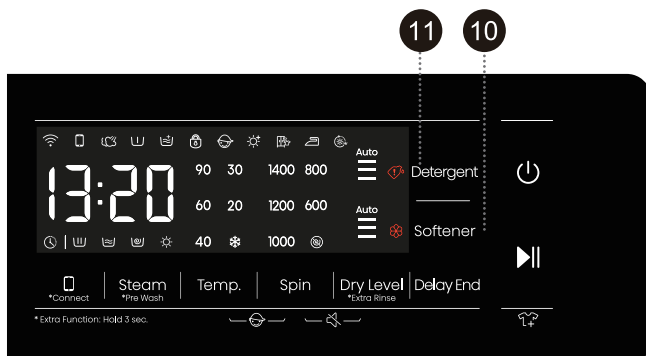

10


Softener

The automatic detergent dosage is enabled by default, and you can control the dosage by the button as needed; if you need to add detergent by yourself, you can disable the automatic detergent dosage.

11

Detergent

The automatic detergent dosage is enabled by default, and you can control the dosage by the button as needed; if you need to add detergent by yourself, you can disable the automatic detergent dosage.

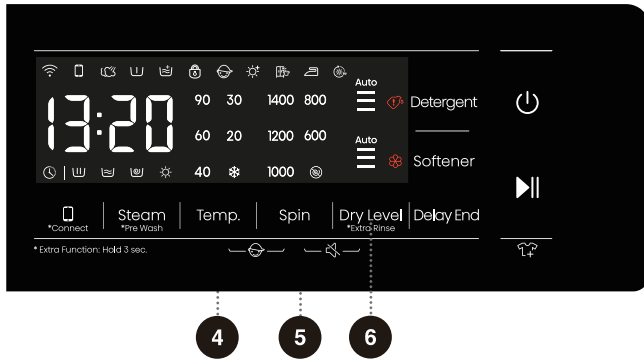

4 + 5

CHILD LOCK

This is a safety feature. To activate it, simultaneously press the positions (4)TEMP. (TEMPERATURE) and (5) SPIN, and hold them for at least 2 seconds. Child Lock icon will light up, and then Child Lock is set up. Repeat the same operation, the Child Lock will be released.

- When the Child Lock is set, all function buttons will be shielded.
- When you turn the machine off, child lock is released. After completing program, child lock will automatically unlock.



5 + 6

MUTE (SWITCHING OFF THE ACOUSTIC SIGNALS)

When the machine is in the state of holding, pause or operation, press " (5)Spin+ (6) Dry level " buttons for 2 seconds. All the buzzing will be turned off except the alarms. When the machine is in the mute state, press " (5)Spin+ (6) Dry level " buttons for 2 seconds. All the buzzing will be activated.

FUNCTION TABLE

Programme	POWDER DETERGENT	DETERGENT	SOFTENER	Mute	Child Lock	Delay End	Spin	Temp.	Dry	Steam	Prewash	Extra rinse	Cupboard	Iron	Extra Dry	Time Dry
Eco40-60	•	•	•	•	•	•	•	-	•	-	-	-	•	•	•	•
Cotton	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
Synthetics	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
Wool	•	•	•	•	•	•	•	•	-	-	-	•	-	-	-	-
Power 49'	•	•	•	•	•	•	•	•	•	-	•	•	•	•	•	•
Quick 15/ Wash&Dry 60'	•	•	•	•	•	•	•	•	-	-	-	•	-	-	-	-
	•	•	•	•	•	•	-	-	•	-	-	-	-	-	-	•
Drum Clean (self-cleaning programme)	-	-	-	•	•	•	-	-	•	-	-	-	-	-	-	•
Spin (spinning rate)	-	-	-	•	•	•	•	-	•	-	-	-	•	•	•	•
Baby Care	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
Allergy Care	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
Refresh	-	-	-	•	•	•	-	-	•	•	-	-	-	-	-	•
Synthetics Dry	-	-	-	•	•	•	-	-	•	-	-	-	•	•	•	•
Cotton Dry	-	-	-	•	•	•	-	-	•	-	-	-	•	•	•	•
Rinse+Spin	-	-	•	•	•	•	•	-	•	-	-	•	•	•	•	•
Shirts	•	•	•	•	•	•	•	•	•	-	•	•	•	•	•	•
Jeans	•	•	•	•	•	•	•	•	•	-	•	•	•	•	•	•
Silk/Delicates	•	•	•	•	•	•	•	•	-	-	-	•	-	-	-	-
Bedding	•	•	•	•	•	•	•	•	•	-	•	•	•	•	•	•
Mix	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•


- Optional functions
- Can not be selected

TIME OPTIMIZATION DURING THE PROGRAMME PROGRESS

In the early stage of the washing programme, the washer dryer uses advanced technology to detect the amount of laundry. After load detection, the washer dryer adjusts the programme duration.

STEP 5: STARTING THE WASHING PROGRAMME

Once you have selected the programme and extra functions, and added the detergent into the detergent compartment, press the (8) **START/PAUSE** button.

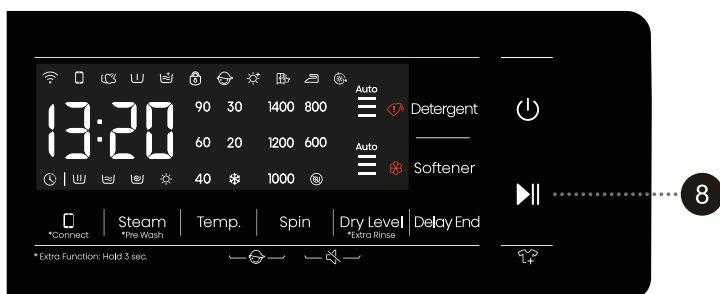



TIME REMAINING TO THE END OF THE PROGRAMME or **DELAY END** time (if set) will appear on the display.


Symbols will be lit on the selected functions.

When the program starts, "----" will appear on the display unit, which indicates that the laundry is being weighed. Program duration (hours : minutes) will be adjusted automatically according to the laundry weight.


After the start of the programme, Door Lock  will be lit on the display unit. When the program is complete, the icon will disappear.

If you press the (8) **START/PAUSE** button during program operation, and all conditions are met for you to open the door, then the  will disappear as well.

If the  flashes, this means that the door cannot be opened; in such case, do not attempt to open the door by force.

 If anything is flashing on the display unit, the washer dryer door is open or not closed correctly. Close the washer dryer door and press the (8) **START/PAUSE** button again to resume the washing programme.

STEP 6: CHANGE OF WASHING PROGRAMME OR MANUAL (PHYSICAL) CANCELLATION

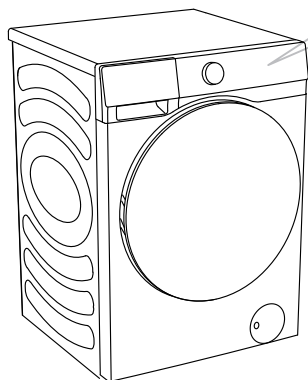

1 To stop and cancel a washing programme, press the button "POWER" for 3 seconds.



2 The washing programme is temporarily paused when the time remaining until programme completion is flashing on the display unit. At the same time, the washer dryer pumps the water out of the washer dryer drum. When the water is pumped out, washer dryer door will be unlocked. If the water in the washer dryer is hot, the washer dryer will automatically cool it and pump/drain it out.



3 To select a new programme, choose the programme by rotating the programme selector knob (1) and then select the programme and extra functions. Press the (8) START/PAUSE button, without adding the detergent again.

STEP 7: END OF THE WASHING PROGRAMME

An acoustic signal will indicate the end of the washing process; the display will read »End«. The appliance will switch off automatically if you do not perform any action within 2 minutes.



1. Open the washer dryer door.
2. Take the laundry from the drum.
3. Close the door!
4. Shut off the water supply tap.
5. Unplug the power cord from the outlet.

INTERRUPTIONS AND CHANGING THE PROGRAMME

MANUAL INTERRUPTION

To stop and cancel a washing programme, press the button "POWER" for 3 seconds.

PAUSE BUTTON

The washing programme can always be stopped by pressing the (8) START/PAUSE button. The washing programme is **temporarily paused** when the time remaining until programme completion is flashing on the display unit. If there is no water in the drum and water temperature is not too high, then the door will unlock, and they can be opened. To resume the washing program, first close the door and then press the key (8) START/PAUSE button.

ADDING/REMOVING LAUNDRY DURING WASHER DRYER OPERATION

After a certain period of time, the washer dryer door can be opened if the water level and temperature are below a predefined threshold.

If the conditions below are met, then the electronic door lock is released and the washer dryer door can be opened:

- water temperature in the drum has to be suitable,
- water level in the drum has to be below a certain value.

In order to add or remove laundry from the washer dryer during programme operation, proceed as follows:

1. Press the (8) START/PAUSE button.
2. If all conditions for release of electronic door lock are met, then you can open the washer dryer door and add or remove laundry from the drum.
3. Close the washer dryer door!
4. Press the (8) START/PAUSE button.

The washing program will resume.

⚠ If you add a considerable amount of laundry during the wash, the laundry could be washed less effectively, since the washer dryer initially sensed a lower weight of the load of laundry and added a smaller amount of water. Insufficient amount of water relative to the amount of laundry could also cause damage to the laundry (rubbing of dry laundry), and washing time can be longer.

⚠ Washing time will resume from the point at which the washing programme was interrupted.

ERRORS


In case of an error or fault, the programme will be interrupted.

Flashing signal lights and an acoustic signal will warn about such occurrence (see TROUBLESHOOTING TABLE), and the error will be indicated on the display (F:XX).

POWER SUPPLY FAILURE

In case of a power supply failure (power outage), the washing programme is interrupted. When power supply is restored, the program is resumed in the stage in which it was interrupted.

OPENING THE DOOR MANUALLY IN CASE OF A POWER OUTAGE - IN CASE OF A PROGRAM PAUSE

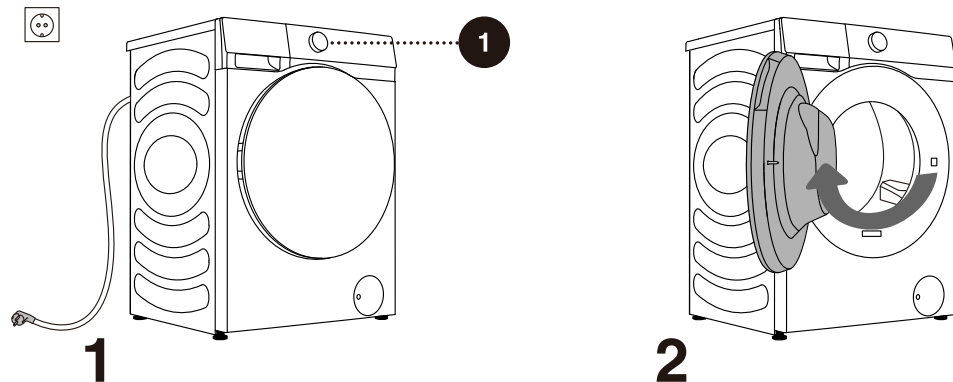

1 To stop and cancel a washing programme, press the button "POWER" for 3 seconds.

2 Open the washer dryer door manually by pulling the handle towards you.

OPENING THE DOOR (PAUSE/CANCEL – CHANGE PROGRAMME)

Washer dryer door can be opened if the water temperature is not excessively high. Otherwise, use manual (physical) interruption (see chapter INTERRUPTIONS AND CHANGING THE PROGRAMME/Manual (physical) interruption).

⚠ If there is still water in the washer dryer after a power outage, make sure not to open the door before you manually drain the water from the washer dryer via the pump filter.

EMERGENCY DOOR OPENING

In case of failure to open the door due to power outage or other special circumstances, the door lock lever at the drainage pump door can be used for emergency opening.

Note:

1. Do not operate when the machine is working normally;
2. Before operation, please make sure that the inner barrel has stopped turning, without high temperature, and the water level is lower than the clothing inlet. If the water level is higher than the clothing inlet, drain off water through the drain-away pipe (if available) or by slowly unscrewing the filter.

TROUBLESHOOTING

WHAT TO DO ...?

The washer dryer shall automatically control the operation of particular functions during the washing cycle. If any irregularity is identified, this will be indicated by reporting (F:XX) on the display. The washer dryer will report the error until it is switched off. Disturbances from the environment. (e.g. the power grid) may result in various error reports (see TROUBLESHOOTING TABLE). In such case:

- Switch off the washer dryer and wait for a few seconds.
- Switch on the washer dryer and repeat the washing programme.
- Most errors during operation can be resolved by the user (see TROUBLESHOOTING TABLE).
- If the error persists, call an authorized service unit.
- Repairs may only be carried out by an adequately trained person.
- Repair or any warranty claim resulting from incorrect connection or use of the washer dryer shall not be covered by the warranty. In such cases, the costs of repair shall be charged to the user.

⚡ The warranty does not cover the errors or failures resulting from disturbances from the environment (lightning strike, power grid failures, natural disasters etc.).

TROUBLESHOOTING AND ERROR TABLE

Problem/error	Indication on the display unit and problem description	What to do?
F01	Water inflow fault	Check the following: <ul style="list-style-type: none"> • Is the water supply tap open and is the pressure too low? • Is the water supply hose pinched? • Is the filter on the water supply hose clogged? • Is the hose frozen?
F03	Drainage fault	Check the following: <ul style="list-style-type: none"> • Is the hose pinched, does the water flow through it? • Is the filter on the drain hose clogged? • Is the hose frozen?
F04/F05/F06/ F07/F23	Electronic module fault	Switch off the appliance; Press the POWER for 3 seconds . Press the " start/pause " button again. If the error reoccurs, call a service technician.
F24	Water level reaches overflow level	Stop the programme by pressing the (8) START/ PAUSE button. Restart the programme. If the appliance continues to pump water into the tub, close the water tap and call a service technician
F13	Error while locking the door	Door is closed, but it cannot be locked. Switch off the washer dryer. Switch it back on and restart the washing programme. If the error reoccurs, call a service technician.
F14	Error while locking the door	Door is closed, but it cannot be unlocked. Turn off the appliance, then turn it back on. If the error reoccurs, call a service technician.
Unb	Unb Unbalance alarm	Unbalance alarm shall be solved by the following methods 1.Laundry winding Press the "Power" for 3 seconds for shutdown, open the door, shake the clothes and put them back into the washer dryer , then select the single dewatering program to dry again. 2.Too light-weighted laundry Press the"Power" for 3 seconds for shutdown, open the door, put in one or two towels, and then select the single dewatering program to dry again.
F15-F18	In case of abnormal drying	You can press and hold the "Power" button for 10s to shut down this machine, and restart this machine.